

 $\rightarrow$ 


 $\overline{1}$ 

## NOTES:


- 1. NEEDLE VALVE SETTING INSTRUCTIONS
- A. ADJUST VALVE TO FULL OPEN.
  B. CLOSE KNOB 2 FULL TURNS.
  C. LOCK ADJUSTMENT KNOB WITH LOCK COLLAR.


 $\triangleleft$ 

Revised:		Drawn:		Date:		A
BKW	6/30/2017	BKW			4/20/2017	1
BEACONMEDÆS         This drawing and the information contained thereon remain the property of BeaconMedaes and may not be used for other than the purpose for which it is loaned without the expressed written permission from BeaconMedaes Engineering.						
Description:	Ũ	Drawing Number: 4107 8561 73				
GEN ASM CD185 DRYER MODULE 392 CFM, Z-MED MEDICAL AIR		DN:			Rev:	Í Í
			HOP170587		01	
SYS	Sheet	2 of 2		SCALE THIS UMENT		
			1			

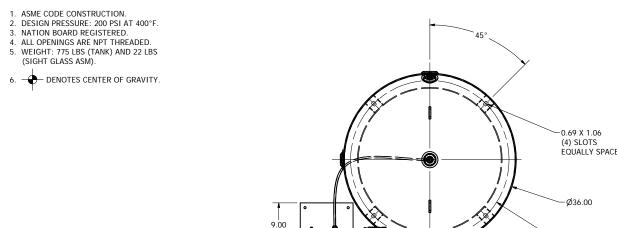

-11.00

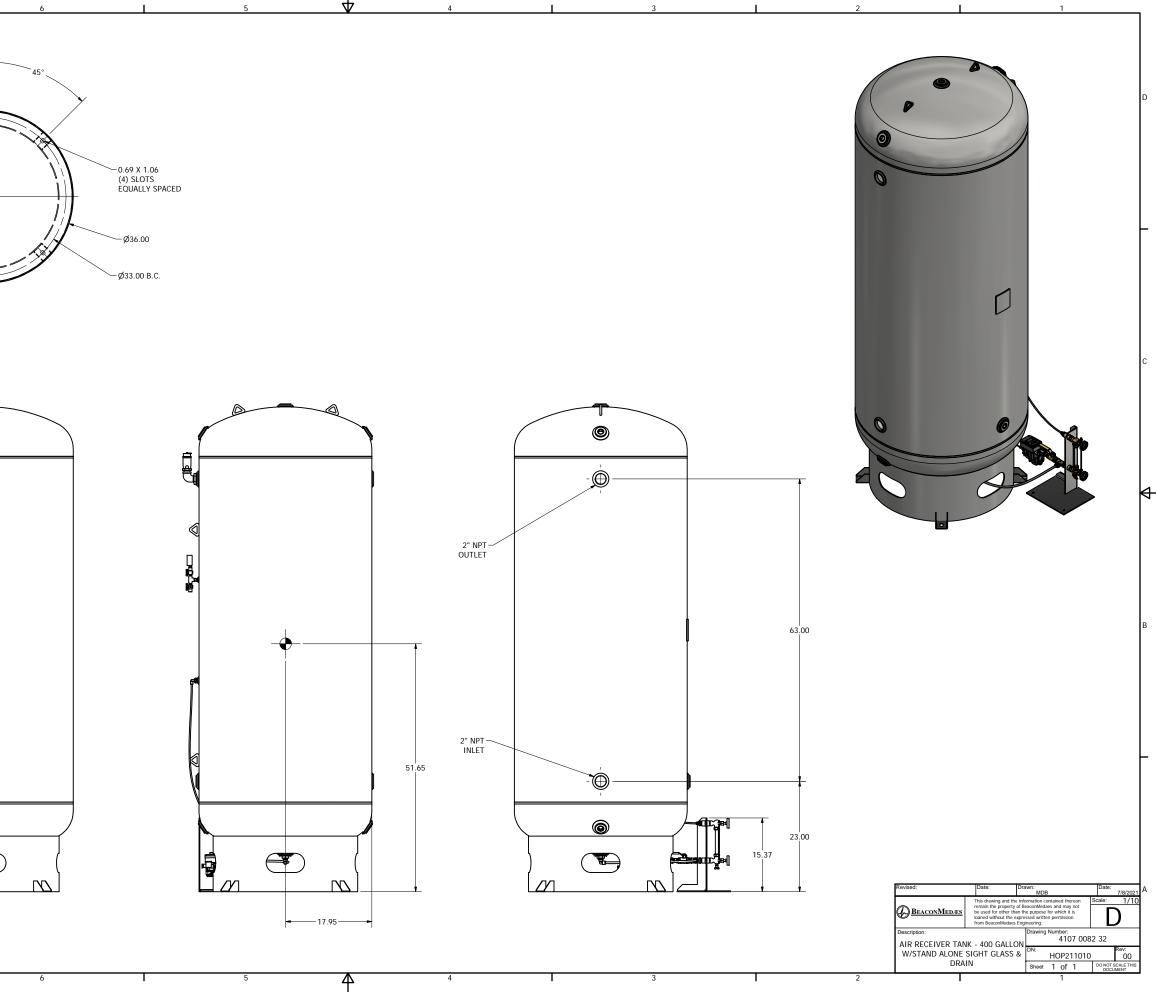

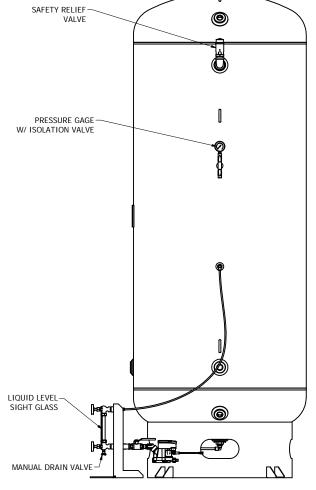

Notes:

D

С

→

В

А