
NOTES:

- 1. ALL INTERCONNECTING PIPE AND FITTINGS SHALL BE INSTALLED BY THE CONTRACTOR.
- 2. PIPING LAYOUT IS DIAGRAMMATIC ONLY. FINAL ARRANGEMENT WILL BE SITE SPECIFIC. CONTRACTOR WILL BE RESPONSIBLE FOR FIELD VERIFICATION AND COORDINATING ACTUAL LOCATION WITH ALL OTHER TRADES.
- 3. CONTRACTOR SHALL VERIFY MOTOR VOLTAGE, PHASE AND AMP RATINGS BEFORE STARTING ELECTRICAL INSTALLATION; AND MAKE CERTAIN THE VOLTAGE SUPPLIED BY THE FACILITY IS THE SAME.
- 4. THE ROOM REQUIRES DEDICATED MECHANICAL VENTILATION WITH AN ALLOWABLE TEMPERATURE VARIANCE OF 40° TO 105°F. (FOR HIGHER AMBIENTS, CONSULT FACTORY)
- 5. ALL ACCESSORIES, PIPE AND FITTINGS, EXCEPT DISCHARGE SILENCERS, BEYOND INLET AND DISCHARGE PORTS ARE SUPPLIED AND INSTALLED BY OTHERS.
- 6. ALLOW 36 INCHES IN FRONT OF CONTROL PANEL FOR MAINTENANCE AND VENTILATION, ALL OTHER SIDES REQUIRE 24 INCHES OF CLEARANCE.
- 7. WHEN DETERMINING THE TOTAL PIPE LENGTH,
 AND ALL THE STRAIGHT LENGTHS OF PIPE TOGETHER
 IN ADDITION TO THE NUMBER OF ELBOWS TIMES THE
 EFFECTIVE PIPE LENGTH FOR THAT PIPE SIZE.
 (SEE EQUIVALENT PIPE LENGTH TABLE & EXAMPLE
 CALCULATION IN THE O&M MANUAL)

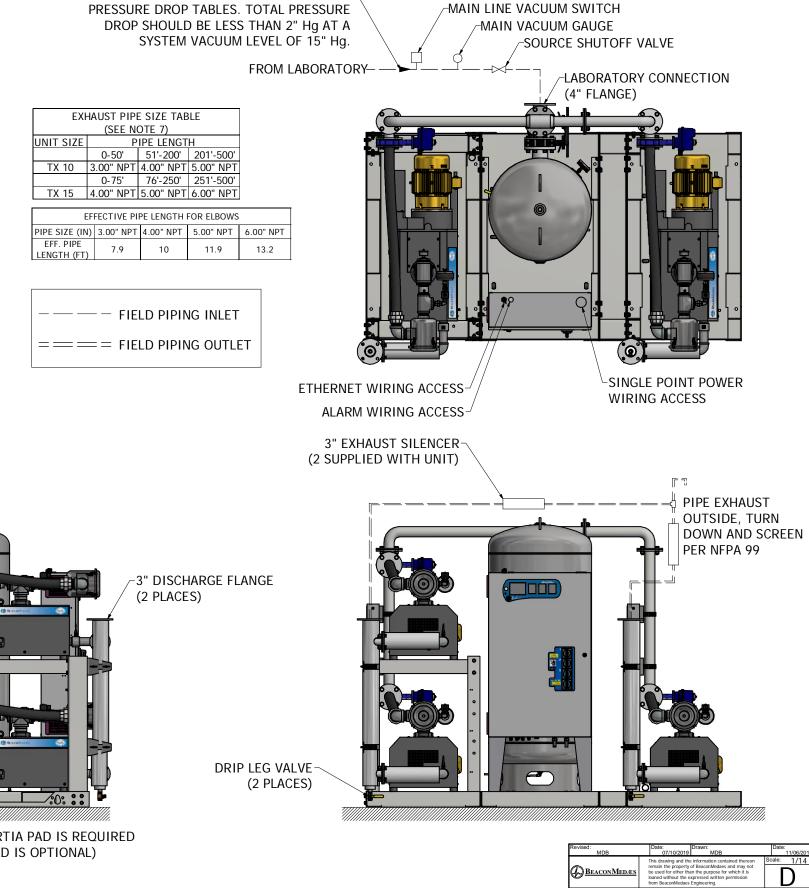


4107 8563 14


BM190348

15HP TX LAB CLAW VAC VSD SPC STANDARD AND O2 ASSURED

(200 GALLON RECEIVER SHOWN)

FOR INTAKE PIPE SIZING REFER TO STANDARD-

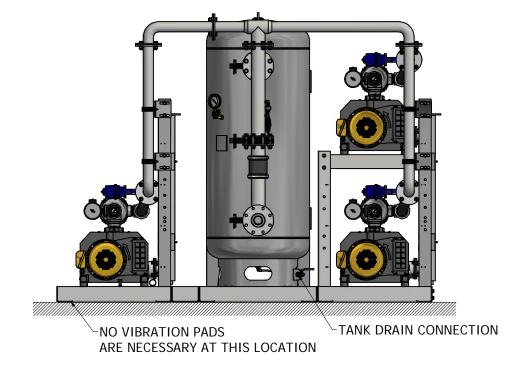

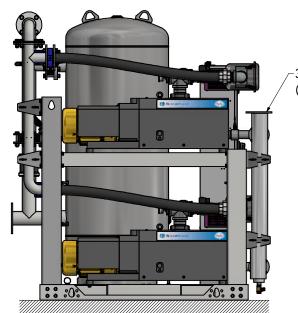

NO FOUNDATION OR INERTIA PAD IS REQUIRED (HOUSEKEEPING PAD IS OPTIONAL)