
Notes:

- 1. ALL INTERCONNECTING PIPE AND FITTINGS SHALL BE INSTALLED BY THE CONTRACTOR.
- 2. PIPING LAYOUT IS DIAGRAMMATIC ONLY. FINAL ARRANGEMENT WILL BE SITE SPECIFIC. CONTRACTOR WILL BE RESPONSIBLE FOR FIELD VERIFICATION AND COORDINATING ACTUAL LOCATION WITH ALL OTHER TRADES.
- 3. CONTRACTOR SHALL VERIFY MOTOR VOLTAGE, PHASE, AND AMP RATINGS BEFORE STARTING ELECTRICAL INSTALLATION; AND MAKE CERTAIN THE VOLTAGE SUPPLIED BY THE FACILITY IS THE SAME.
- 4. THE ROOM REQUIRES DEDICATED MECHANICAL VENTILATION WITH AN ALLOWABLE TEMPERATURE VARIANCE OF 40° TO 105°. (FOR HIGHER AMBIENTS, CONSULT FACTORY).
- 5. ALLOW 36 INCHES IN FRONT OF CONTROL PANEL FOR MAINTENANCE AND VENTILATION, ALL OTHER SIDES REQUIRE 24 INCHES OF CLEARANCE.
- 6. ALL ACCESSORIES, PIPE, AND FITTINGS BEYOND DISCHARGE PORTS ARE SUPPLIED AND INSTALLED BY OTHERS.

BY OTHERS

ETHERNET WIRING ACCESS-ALARM WIRING ACCESS-

> SINGLE POINT POWER-WIRING ACCESS

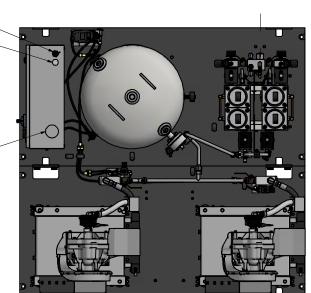


SOURCE VALVE¬

- FOR DISCHARGE PIPE SIZING REFER TO STANDARD PRESSURE DROP TABLES.

► TO FACILITY


- TOTAL PRESSURE DROP SHOULD BE LESS THAN 5 PSIG.

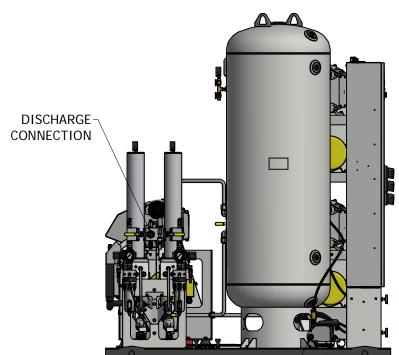


SINGLE POINT DRAIN-

CONNECTION CONTRACTOR SHALL PIPE TO FLOOR DRAIN

NO VIBRATION PADS ARE  $\neg$  NECESSARY AT THIS LOCATION

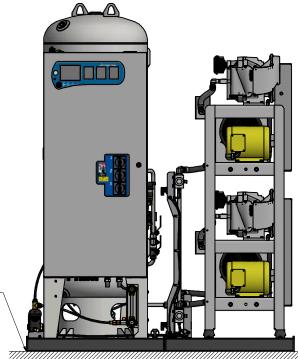

NO FOUNDATION OR INERTIA PAD IS REQUIRED (HOUSEKEEPING PAD IS OPTIONAL)

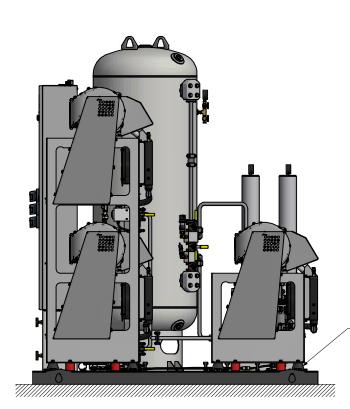

NOTE: ALL ACCESSORIES, PIPE, AND FITTINGS BEYOND INLET AND DISCHARGE PORTS ARE SUPPLIED AND INSTALLED BY OTHERS.

-HEAVY-DUTY 4-POINT ISOLATION (SEISMIC OPTIONAL)

This drawing and the information contained thereon remain the property of BeaconMedica and may not be used for other than the purpose for which it is loaned without the expressed written permission from BeaconMedicas Engineering.

Description:

INST DIA - LAB AIR TX SCROLL SPC 5-7.5HP 10 BAR W/ DESC DRYER

DRYER

DN:

BM190343

Sheet 1 of 1 DONOT SOLLE THES DOCUMENT

(5HP WITH 120 GALLON RECEIVER SHOWN)