
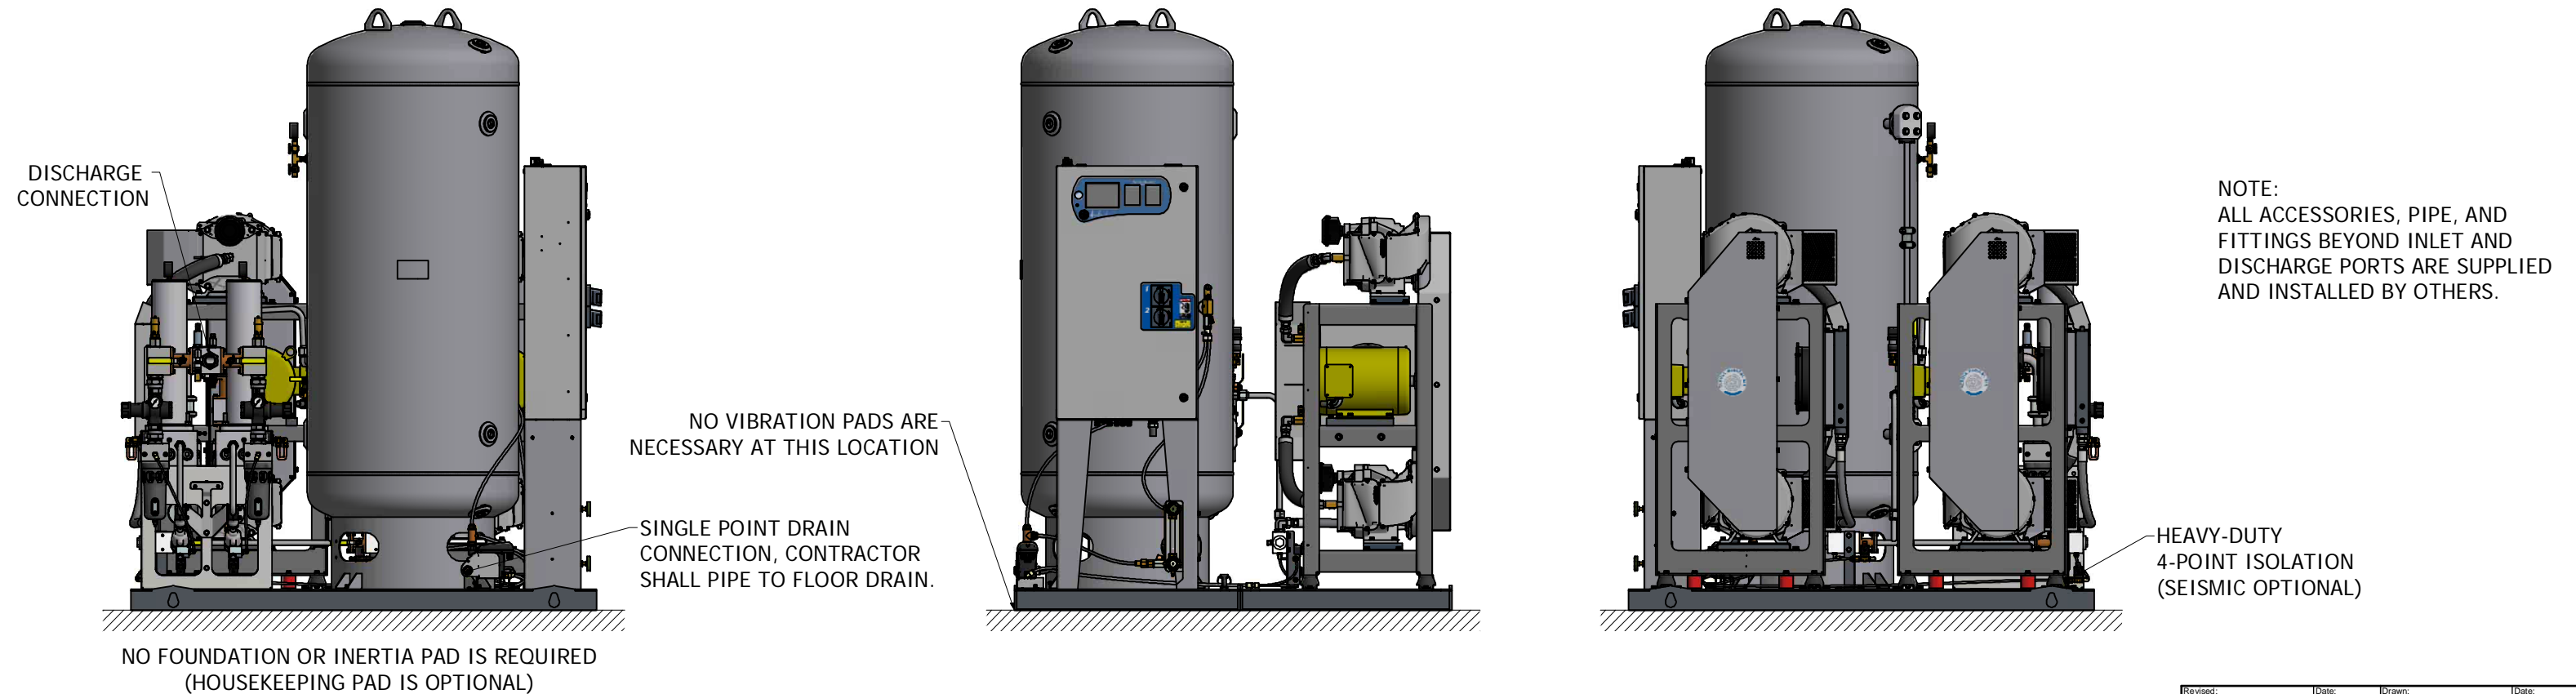


Notes:

1. ALL INTERCONNECTING PIPE AND FITTINGS SHALL BE INSTALLED BY THE CONTRACTOR.
2. PIPING LAYOUT IS DIAGRAMMATIC ONLY. FINAL ARRANGEMENT WILL BE SITE SPECIFIC. CONTRACTOR WILL BE RESPONSIBLE FOR FIELD VERIFICATION AND COORDINATING ACTUAL LOCATION WITH ALL OTHER TRADES.
3. CONTRACTOR SHALL VERIFY MOTOR VOLTAGE, PHASE, AND AMP RATINGS BEFORE STARTING ELECTRICAL INSTALLATION; AND MAKE CERTAIN THE VOLTAGE SUPPLIED BY THE FACILITY IS THE SAME.
4. THE ROOM REQUIRES DEDICATED MECHANICAL VENTILATION WITH AN ALLOWABLE TEMPERATURE VARIANCE OF 40° TO 105°. (FOR HIGHER AMBIENTS, CONSULT FACTORY).
5. ALLOW 36 INCHES IN FRONT OF CONTROL PANEL FOR MAINTENANCE AND VENTILATION, ALL OTHER SIDES REQUIRE 24 INCHES OF CLEARANCE.
6. ALL ACCESSORIES, PIPE, AND FITTINGS BEYOND DISCHARGE PORTS ARE SUPPLIED AND INSTALLED BY OTHERS.

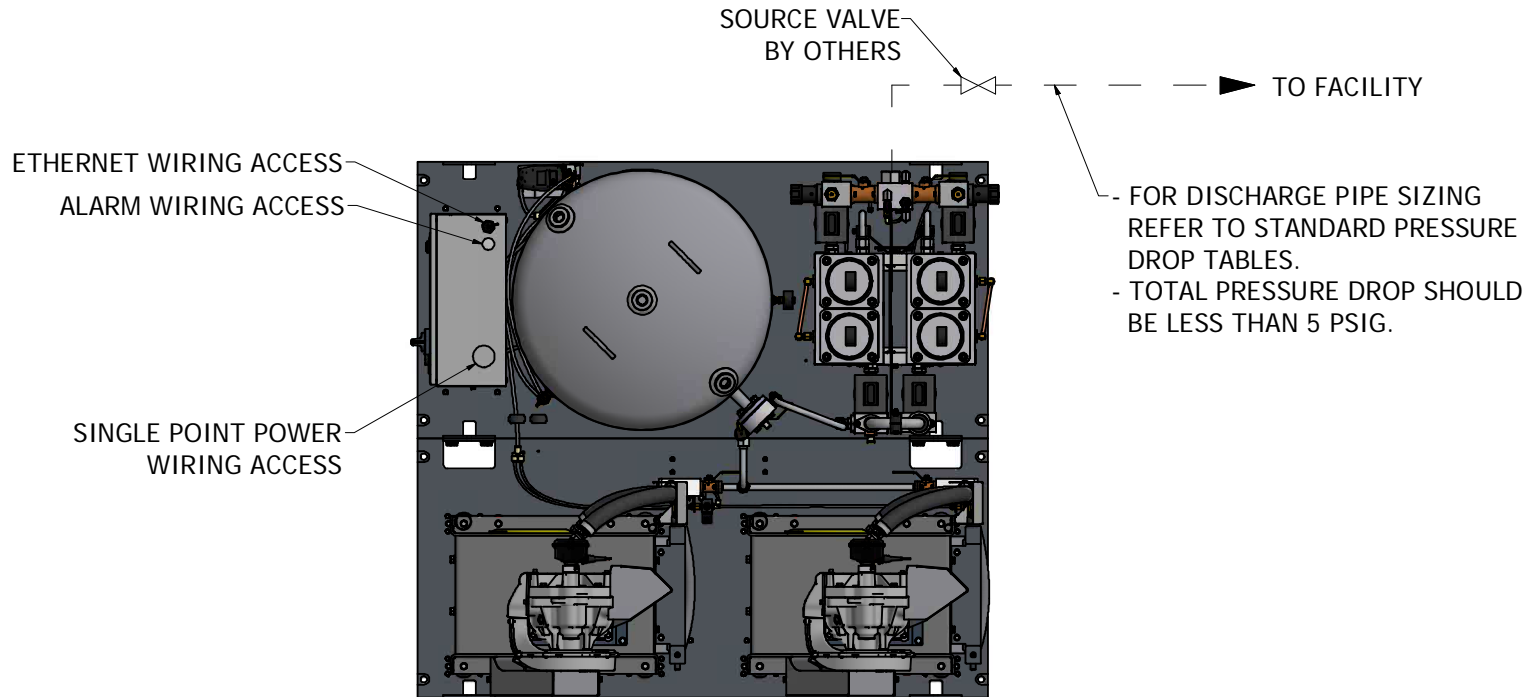

Revised: MDB	Date: 07/01/2019	Drawn: JDY	Date: 01/27/2011
BEACONMED/ES		D	
Description: INST DIA - LAB AIR DX SCROLL SPC 10-15HP 10 BAR W/ DESC DRYER		Drawing Number: 4107 8526 40	
DN: BM190343		Rev: 02	
Sheet 1 of 1		DO NOT SCALE THIS DOCUMENT	