

2205 6105 66.01 Page 1 of 2 01 May 2021

Laboratory Air Oil-Free Scroll Compressor with Enclosure (3 - 7.5 Hp) SPECIFICATION

Enclosed Scroll Compressor

The laboratory air oil-free scroll compressor package is floor mounted and enclosed in a steel, sound-insulated canopy. The compressor is designed and supplied as a complete package with all necessary equipment, including but not limited to the following components:

- · Inlet filter
- · Air compressor element
- Drive motor
- Aftercooler
- · Starter and regulation system
- · Control panel

All components are mounted within a common six-sided low sound enclosure with solid base frame.

The enclosed scroll package provides air quality that qualifies to be in the category "Class 0" in terms of oil content as defined by standard ISO 8573-1:2001 Part 1.

Compressor Unit

Compressor Module: The compressor package is made up of one compressor module consisting of a compressor element belt driven by an electric motor, and radial fan. The module is equipped with a temperature sensor to monitor the element housing temperature.

Compression Element: The compressor element consists of a fixed scroll housing and an orbiting scroll rotor. The element and housing are pressure die cast aluminum. The crankshaft and pulley are cast iron. The element is V-belt driven using belts with XPZ profile. Bolts for adjusting belt tension are easily accessible via removable panels.

Drive Motor: The compressor module is belt driven by an IE3 NEMA Premium Efficiency, Totally Enclosed Fan Cooled motor for optimum performance and reliability. The motor insulation is Class F. The motor bearings are greased for life and do not require special attention.

Cooling System: The compressor element is cooled by an integrated radial fan. The compressed air is cooled by an aluminum block aftercooler and an axial fan fitted on the motor shaft provides cooling for the aftercooler.

Control Panel: The control panel comprises a pressure gauge, an hour meter, a start button and a temperature gauge. The compressor is started and stopped automatically by a pressure switch. The electrical components are located in the cubicle behind the front panel door.

Starter: The compressor is factory equipped with a direct on line starter. The starter is mounted and wired within the UL listed compressor control cubicle.

Regulation System: The compressor regulation system keeps the net pressure between manually set limits by starting and stopping the compressor module.

Compressor Protection: The compressor contains a temperature shut-down switch and safety valve to protect the compressor against overheating and over-pressure. A check valve prevents blow-back of compressed air when the compressor is stopped.

Inlet Air Filter

A paper cartridge type filter is provided and factory installed. The filter eleminates dust and particles down to 1 μm


Compressor Enclosure


The compressor module is enclosed in a steel, sound-insulated canopy with removable panels to provide access for maintenance. The sound insulating material is a flame retardant polyurethane.





2205 6105 66.01 Page 2 of 2 01 May 2021

COOLING AIR OUTLET OF **COMPRESSOR AND MOTOR** Û

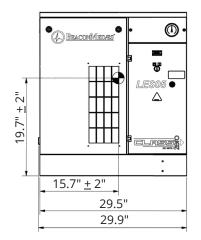

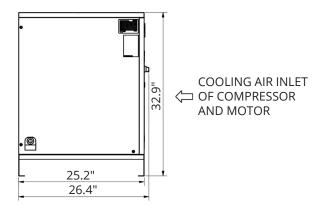

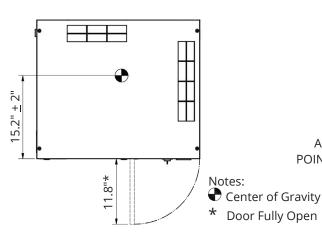

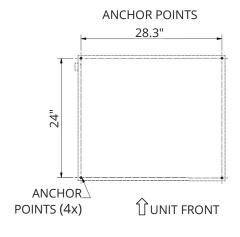

Scroll Compressor Package Specifications											
System Model No.	НР	Max. Working Pressure (psig)	Effective Working Pressure (psig)	Capacity FAD¹ (cfm)	Noise Level ²	Package FLA					
						208V 60 Hz	230V 60 Hz	460V 60 Hz	400V 50 Hz	230V 50 Hz	Weight (Lbs.)
LES03-115T-ND	3	116	101.5	8.9	56	10.1	9.1	4.6	5.6	9.7	276
LES03-145T-ND	3	145	130.5	7.2	56	10.1	9.1	4.6	5.6	9.7	276
LES05-115T-ND	5	116	101.5	14.0	58	17.3	15.9	8.0	9.1	15.7	294
LES05-145T-ND	5	145	130.5	12.5	58	17.3	15.9	8.0	9.1	15.7	294
LES08-115T-ND	7.5	116	101.5	20.8	59	25.0	24.0	12.0	13.4	23.3	347
LES08-145T-ND	7.5	145	130.5	16.1	59	25.0	24.0	12.0	13.4	23.3	347

Notes: 1. Unit performance measured according to ISO 1217, Annex C, latest edition. Reference conditions: Absolute inlet pressure 14.5 psig; intake air temperature 68° F.

2. Noise level measured at a distance of 1m according to Pneurop/CAGI PN8NTC2 test code.

Door Fully Open

BeaconMedæs 1059 Paragon Way Rock Hill, SC 29730 Phone: (803) 817-5600 Fax: (803) 817-5750 www.beaconmedaes.com





