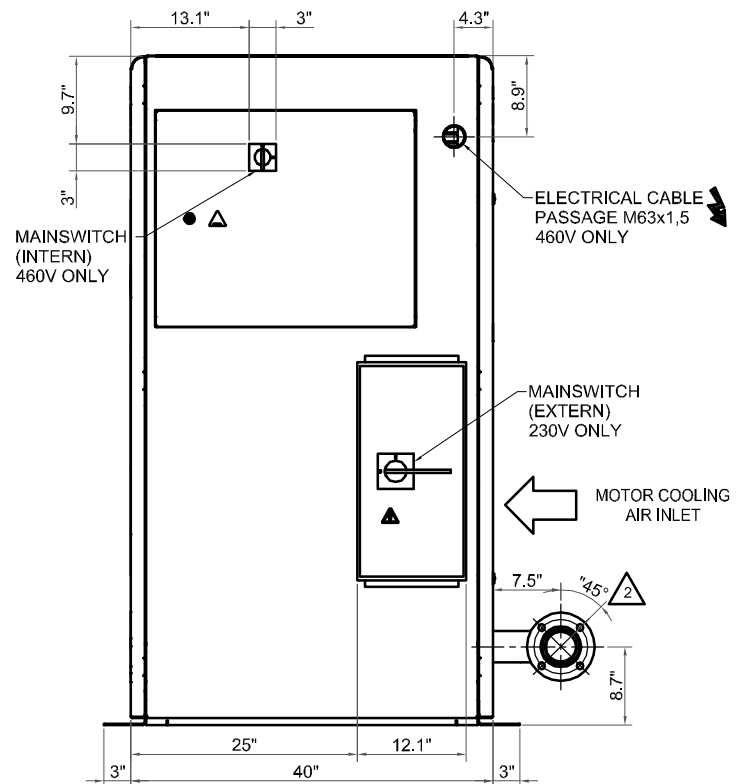
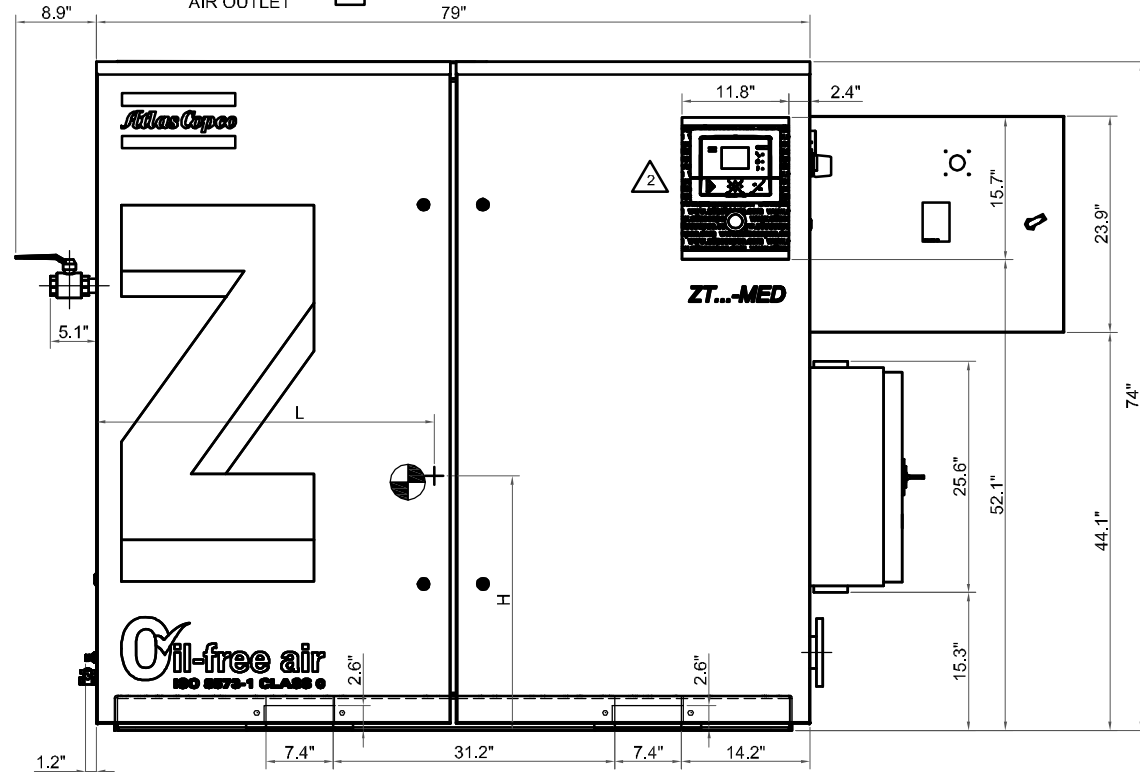
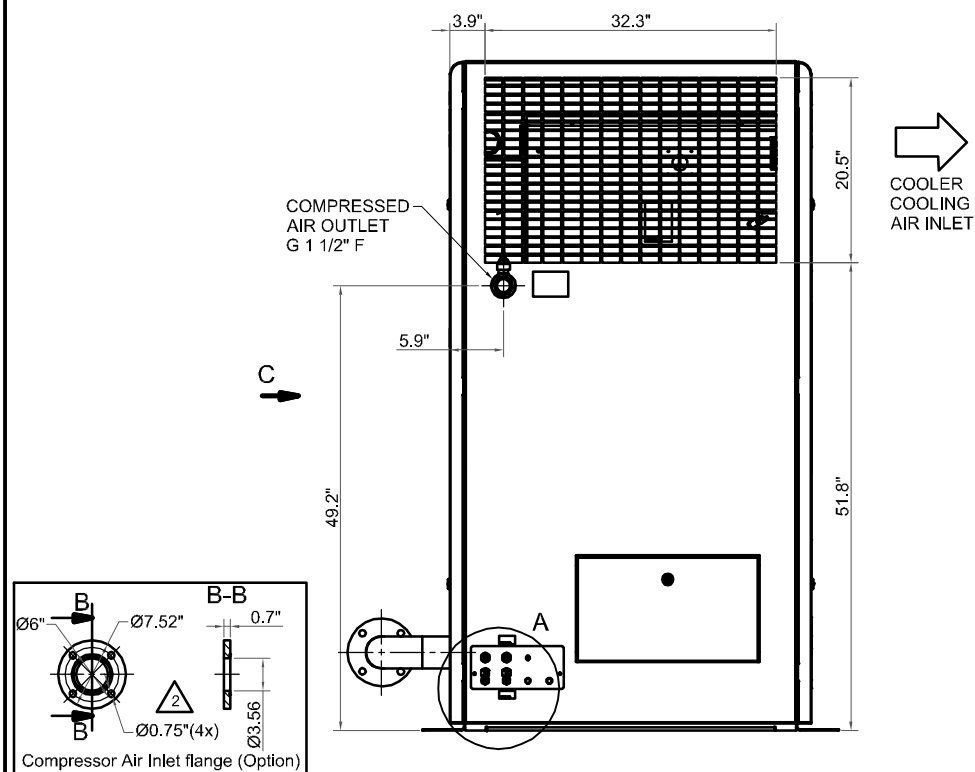
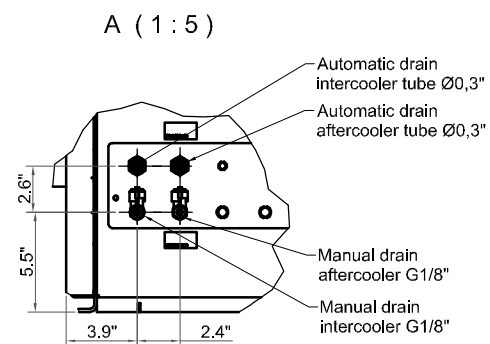
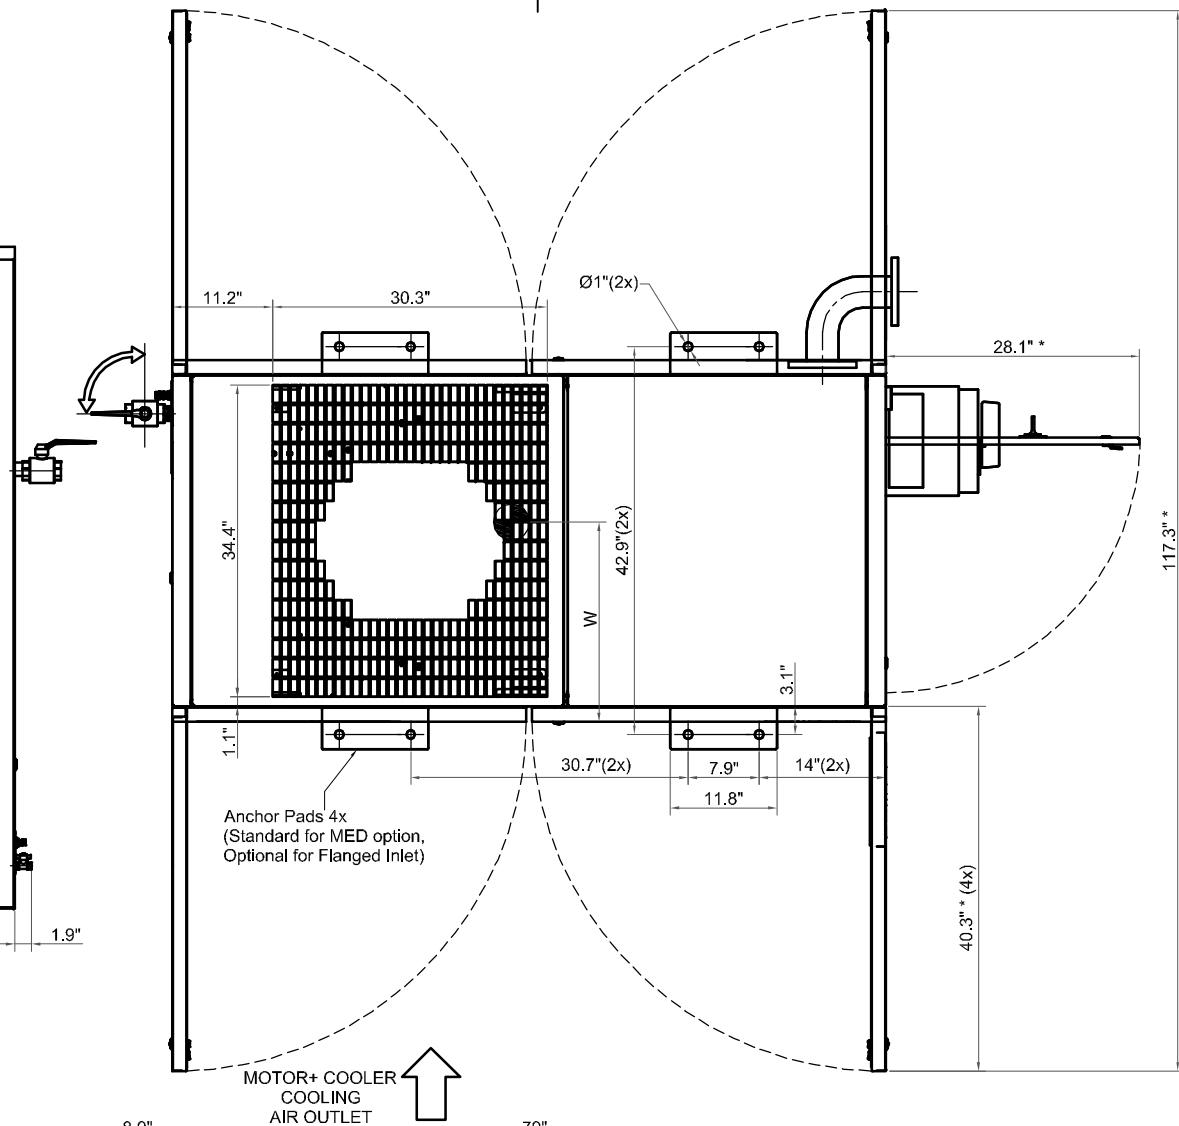
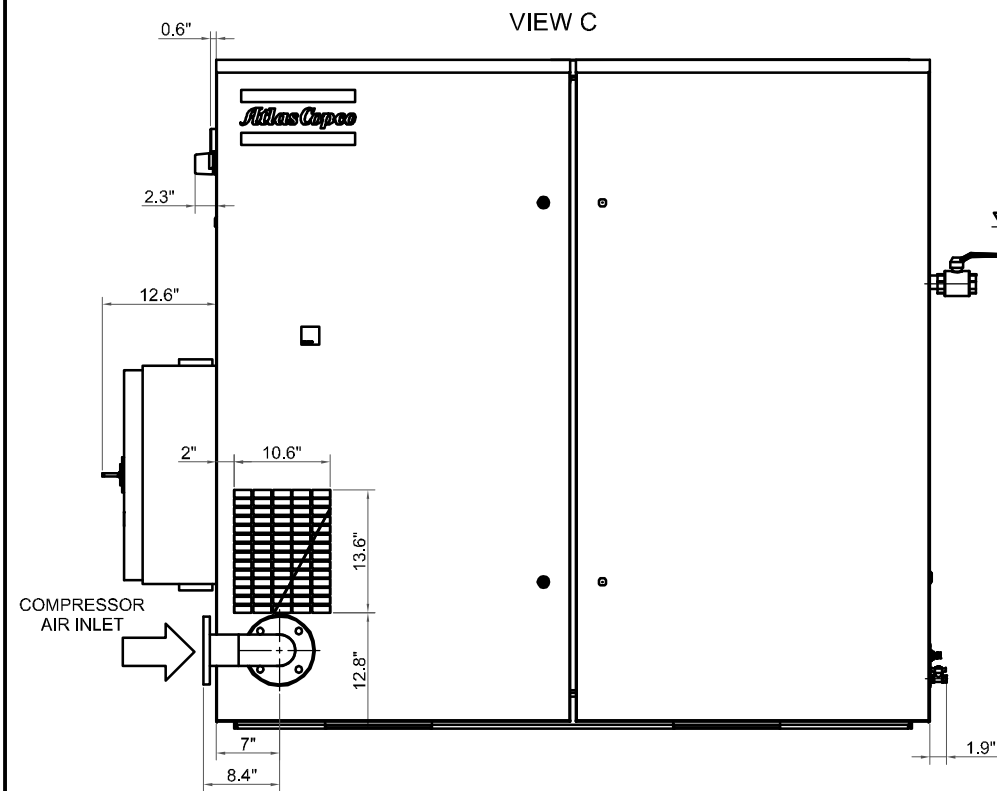


Note X:
 - Dimension drawing standardized
 - Air inlet flange details added
 - Mk-IV Elektronikon changed to Mk5

Approx. Mass ±110 (LBS)		Center of gravity ±2 (inch)	
Type	Pack	Dim.	Pack
ZT30	2648	W	20.4
ZT37	2758	L	38.7
ZT45	2842	H	28.2

All materials supplied are in compliance with the requirements of the List of Prohibited Substances

Note:
 * With full open door


9820576800
 Parent 3D model

Tolerances, if not indicated, according to:		ATLAS COPCO STANDARD CLASS	
Name	DIMENS.	ZT30-45 MED	Secretary Class
Material	NOT APPLICABLE		1/12X/ 3
Treatment	Not Applicable		INV
Scale	1:10	Family	A/ Compare
Drawn by	sraman	Blank nr.	Replaces
Version Dwg	02.13	Blank wt.	0 kg
Des checked.	Prod checked.	Approved.	Date
9820576800		9820576800	
Parent 3D model		Ed. Version 3D	
Approved		Approved	



ALL


Sheet 1 / 1

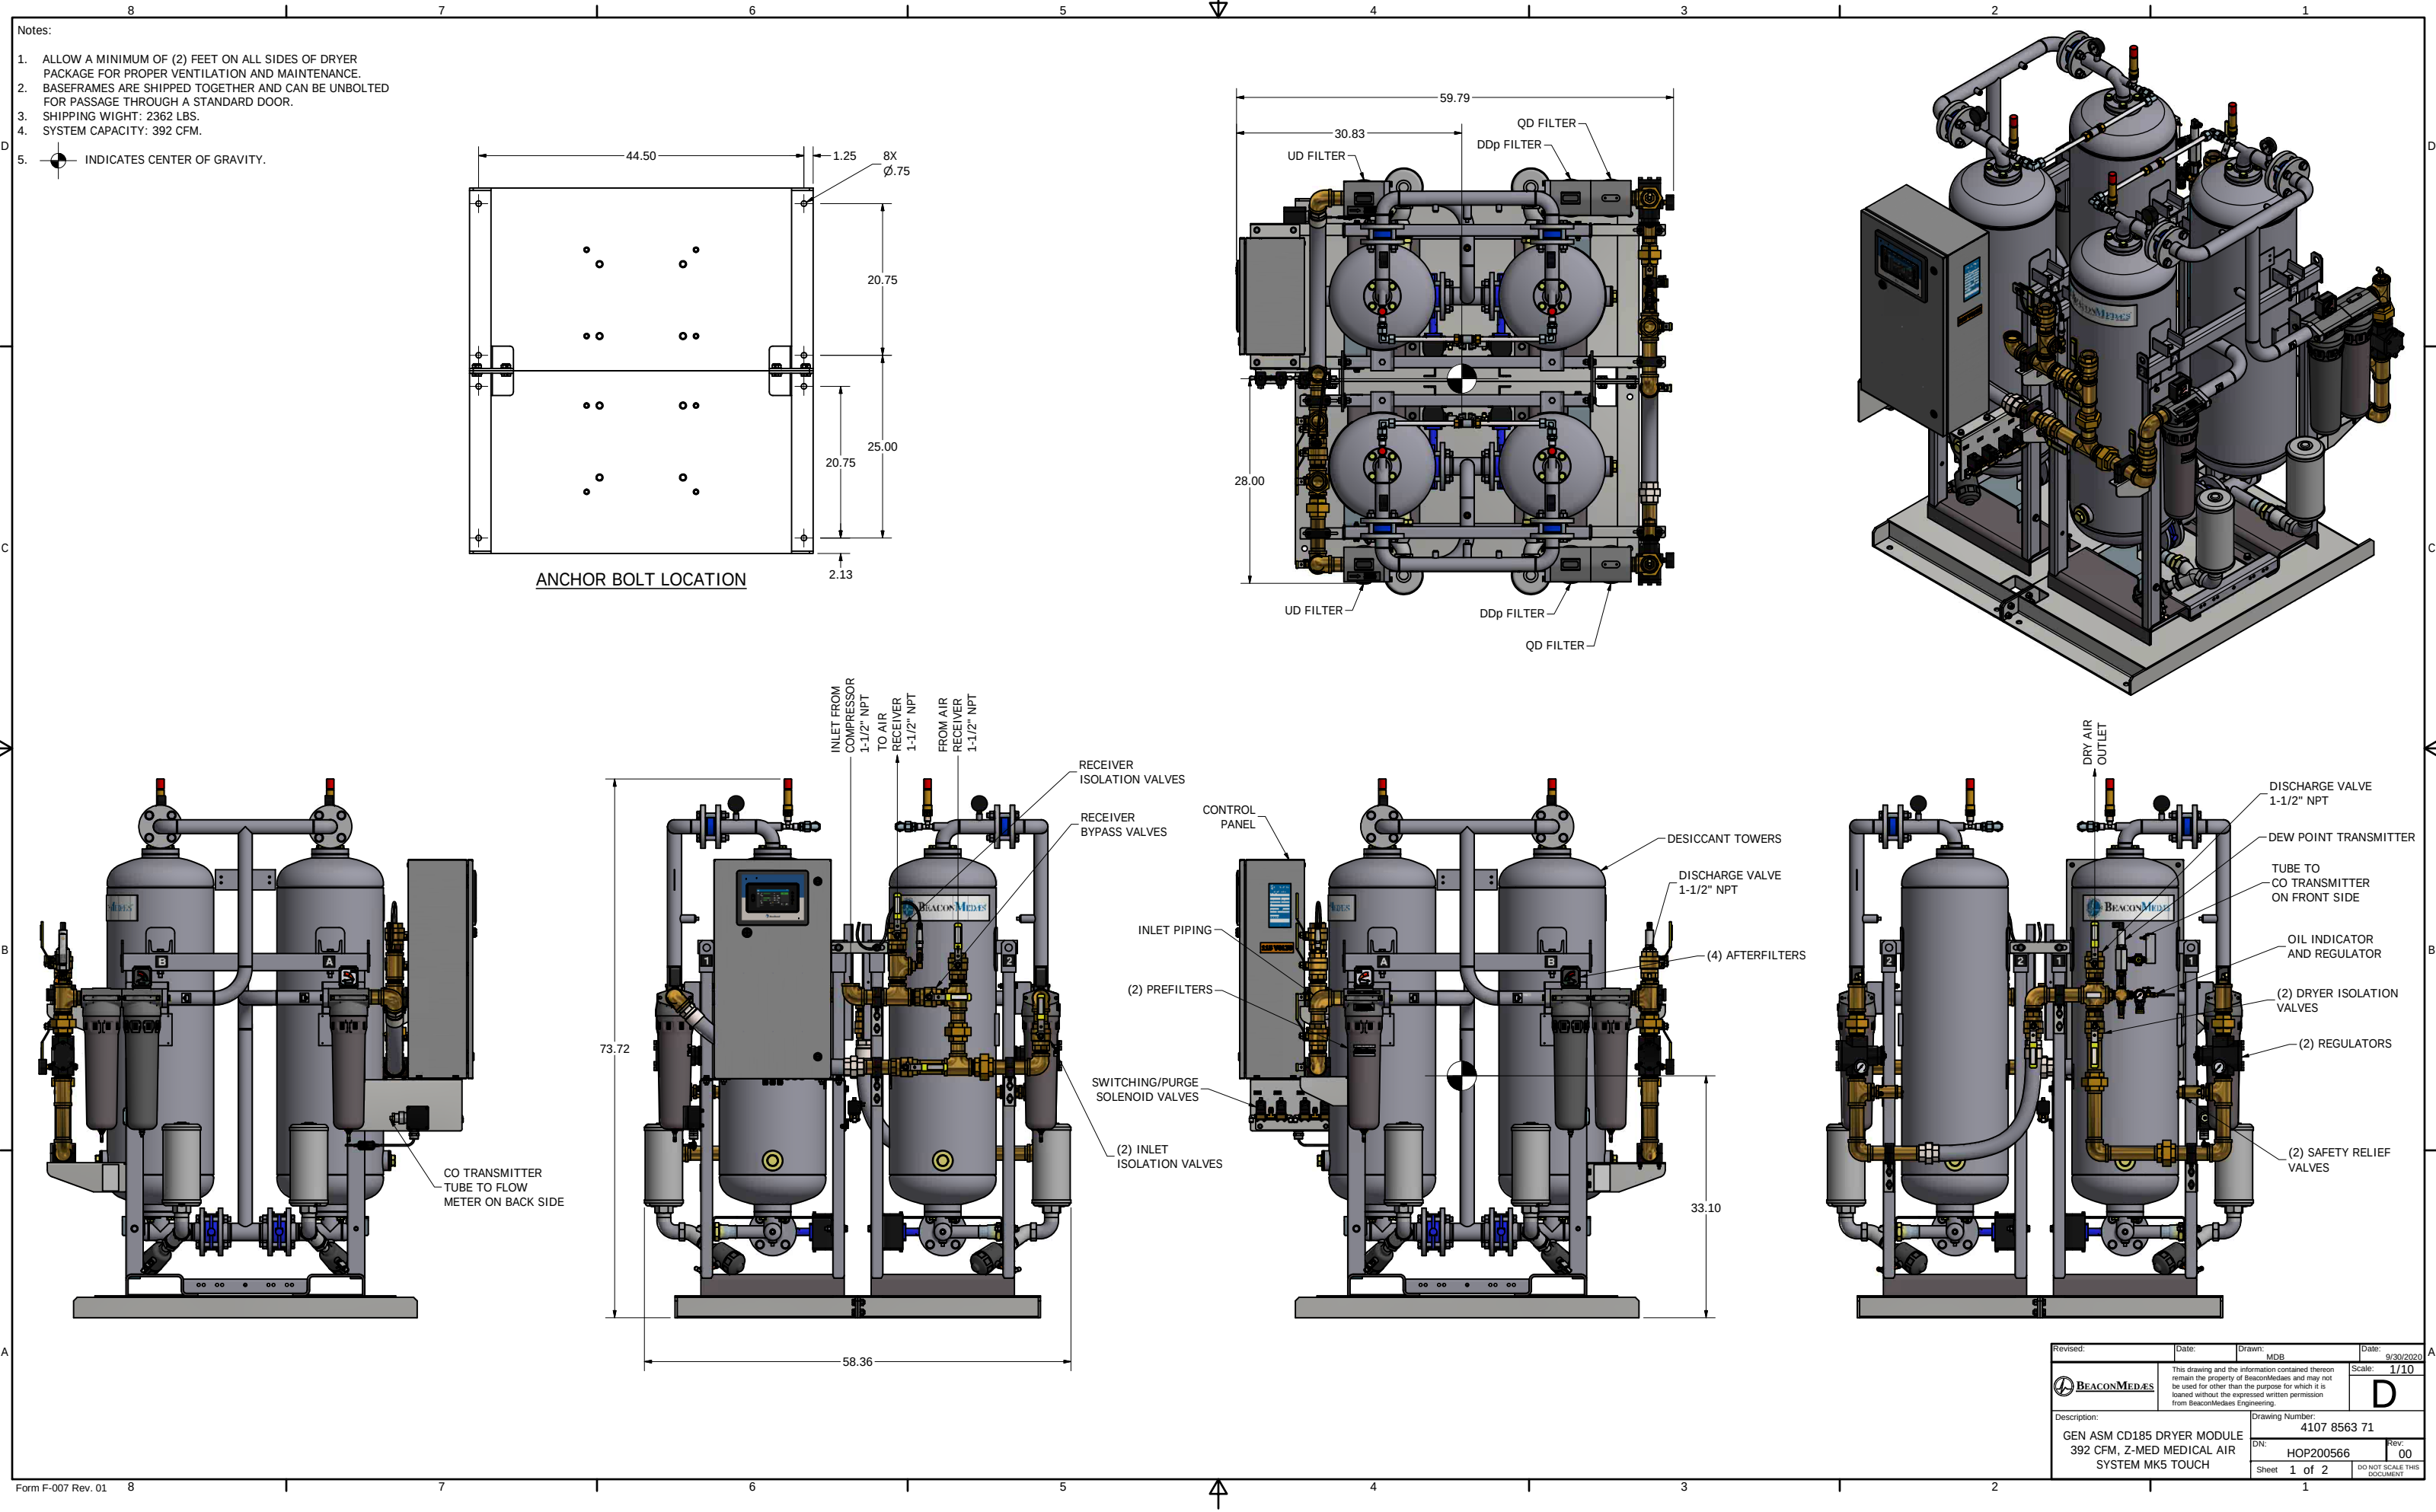

- Notes:
1. ALLOW A MINIMUM OF (2) FEET ON ALL SIDES OF DRYER PACKAGE FOR PROPER VENTILATION AND MAINTENANCE.
 2. BASEFRAMES ARE SHIPPED TOGETHER AND CAN BE UNBOLTED FOR PASSAGE THROUGH A STANDARD DOOR.
 3. SHIPPING WIGHT: 2362 LBS.
 4. SYSTEM CAPACITY: 392 CFM.
 5. INDICATES CENTER OF GRAVITY.


ANCHOR BOLT LOCATION

Revised:	Date:	Drawn: MDB	Date: 9/30/2020
This drawing and the information contained therein remain the property of BeaconMedaes and may not be used for other than the purpose for which it is loaned without the expressed written permission from BeaconMedaes Engineering.		Scale: 1/10	D
Description: GEN ASM CD185 DRYER MODULE 392 CFM, Z-MED MEDICAL AIR SYSTEM MK5 TOUCH		Drawing Number: 4107 8563 71	
DN: HOP200566		Rev: 00	
Sheet 1 of 2		DO NOT SCALE THIS DOCUMENT	

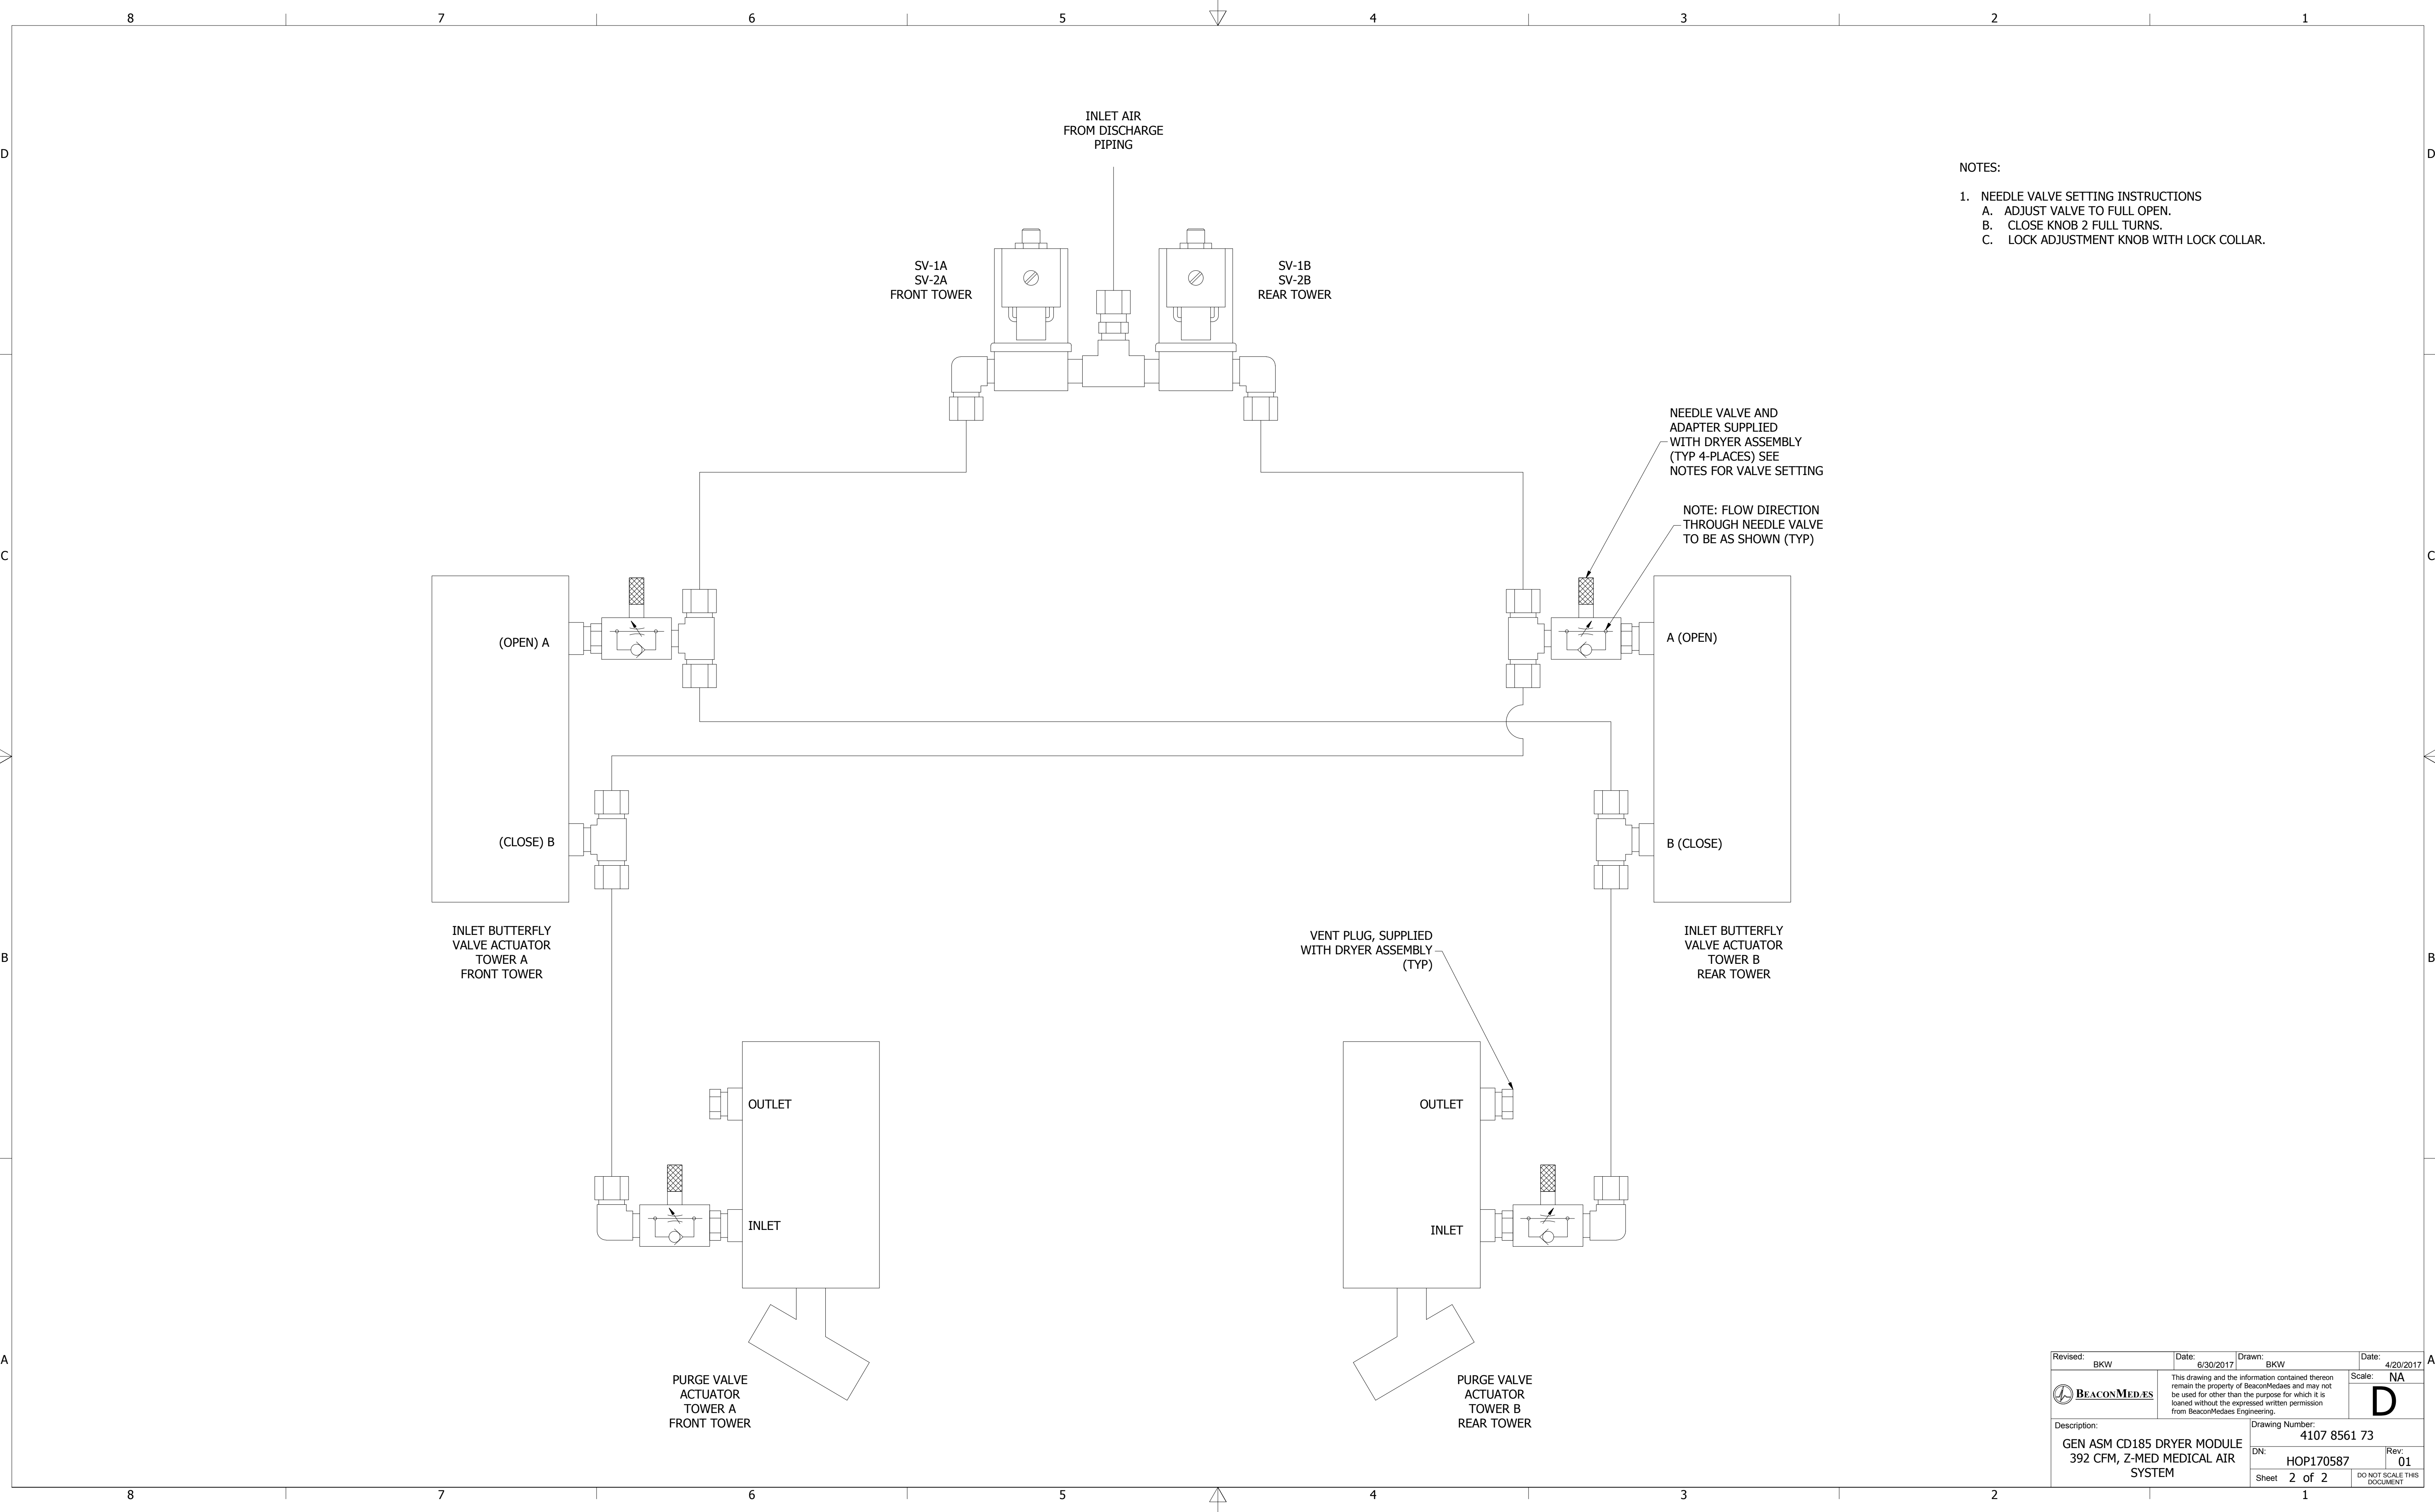

- NOTES:
- NEEDLE VALVE SETTING INSTRUCTIONS
 - ADJUST VALVE TO FULL OPEN.
 - CLOSE KNOB 2 FULL TURNS.
 - LOCK ADJUSTMENT KNOB WITH LOCK COLLAR.

Revised: BKW	Date: 6/30/2017	Drawn: BKW	Date: 4/20/2017
	This drawing and the information contained therein remain the property of BeaconMedaes and may not be used for other than the purpose for which it is loaned without the expressed written permission from BeaconMedaes Engineering.		Scale: NA
			D
Description: GEN ASM CD185 DRYER MODULE 392 CFM, Z-MED MEDICAL AIR SYSTEM		Drawing Number: 4107 8561 73	
DN: HOP170587		Rev: 01	
Sheet 2 of 2		DO NOT SCALE THIS DOCUMENT	

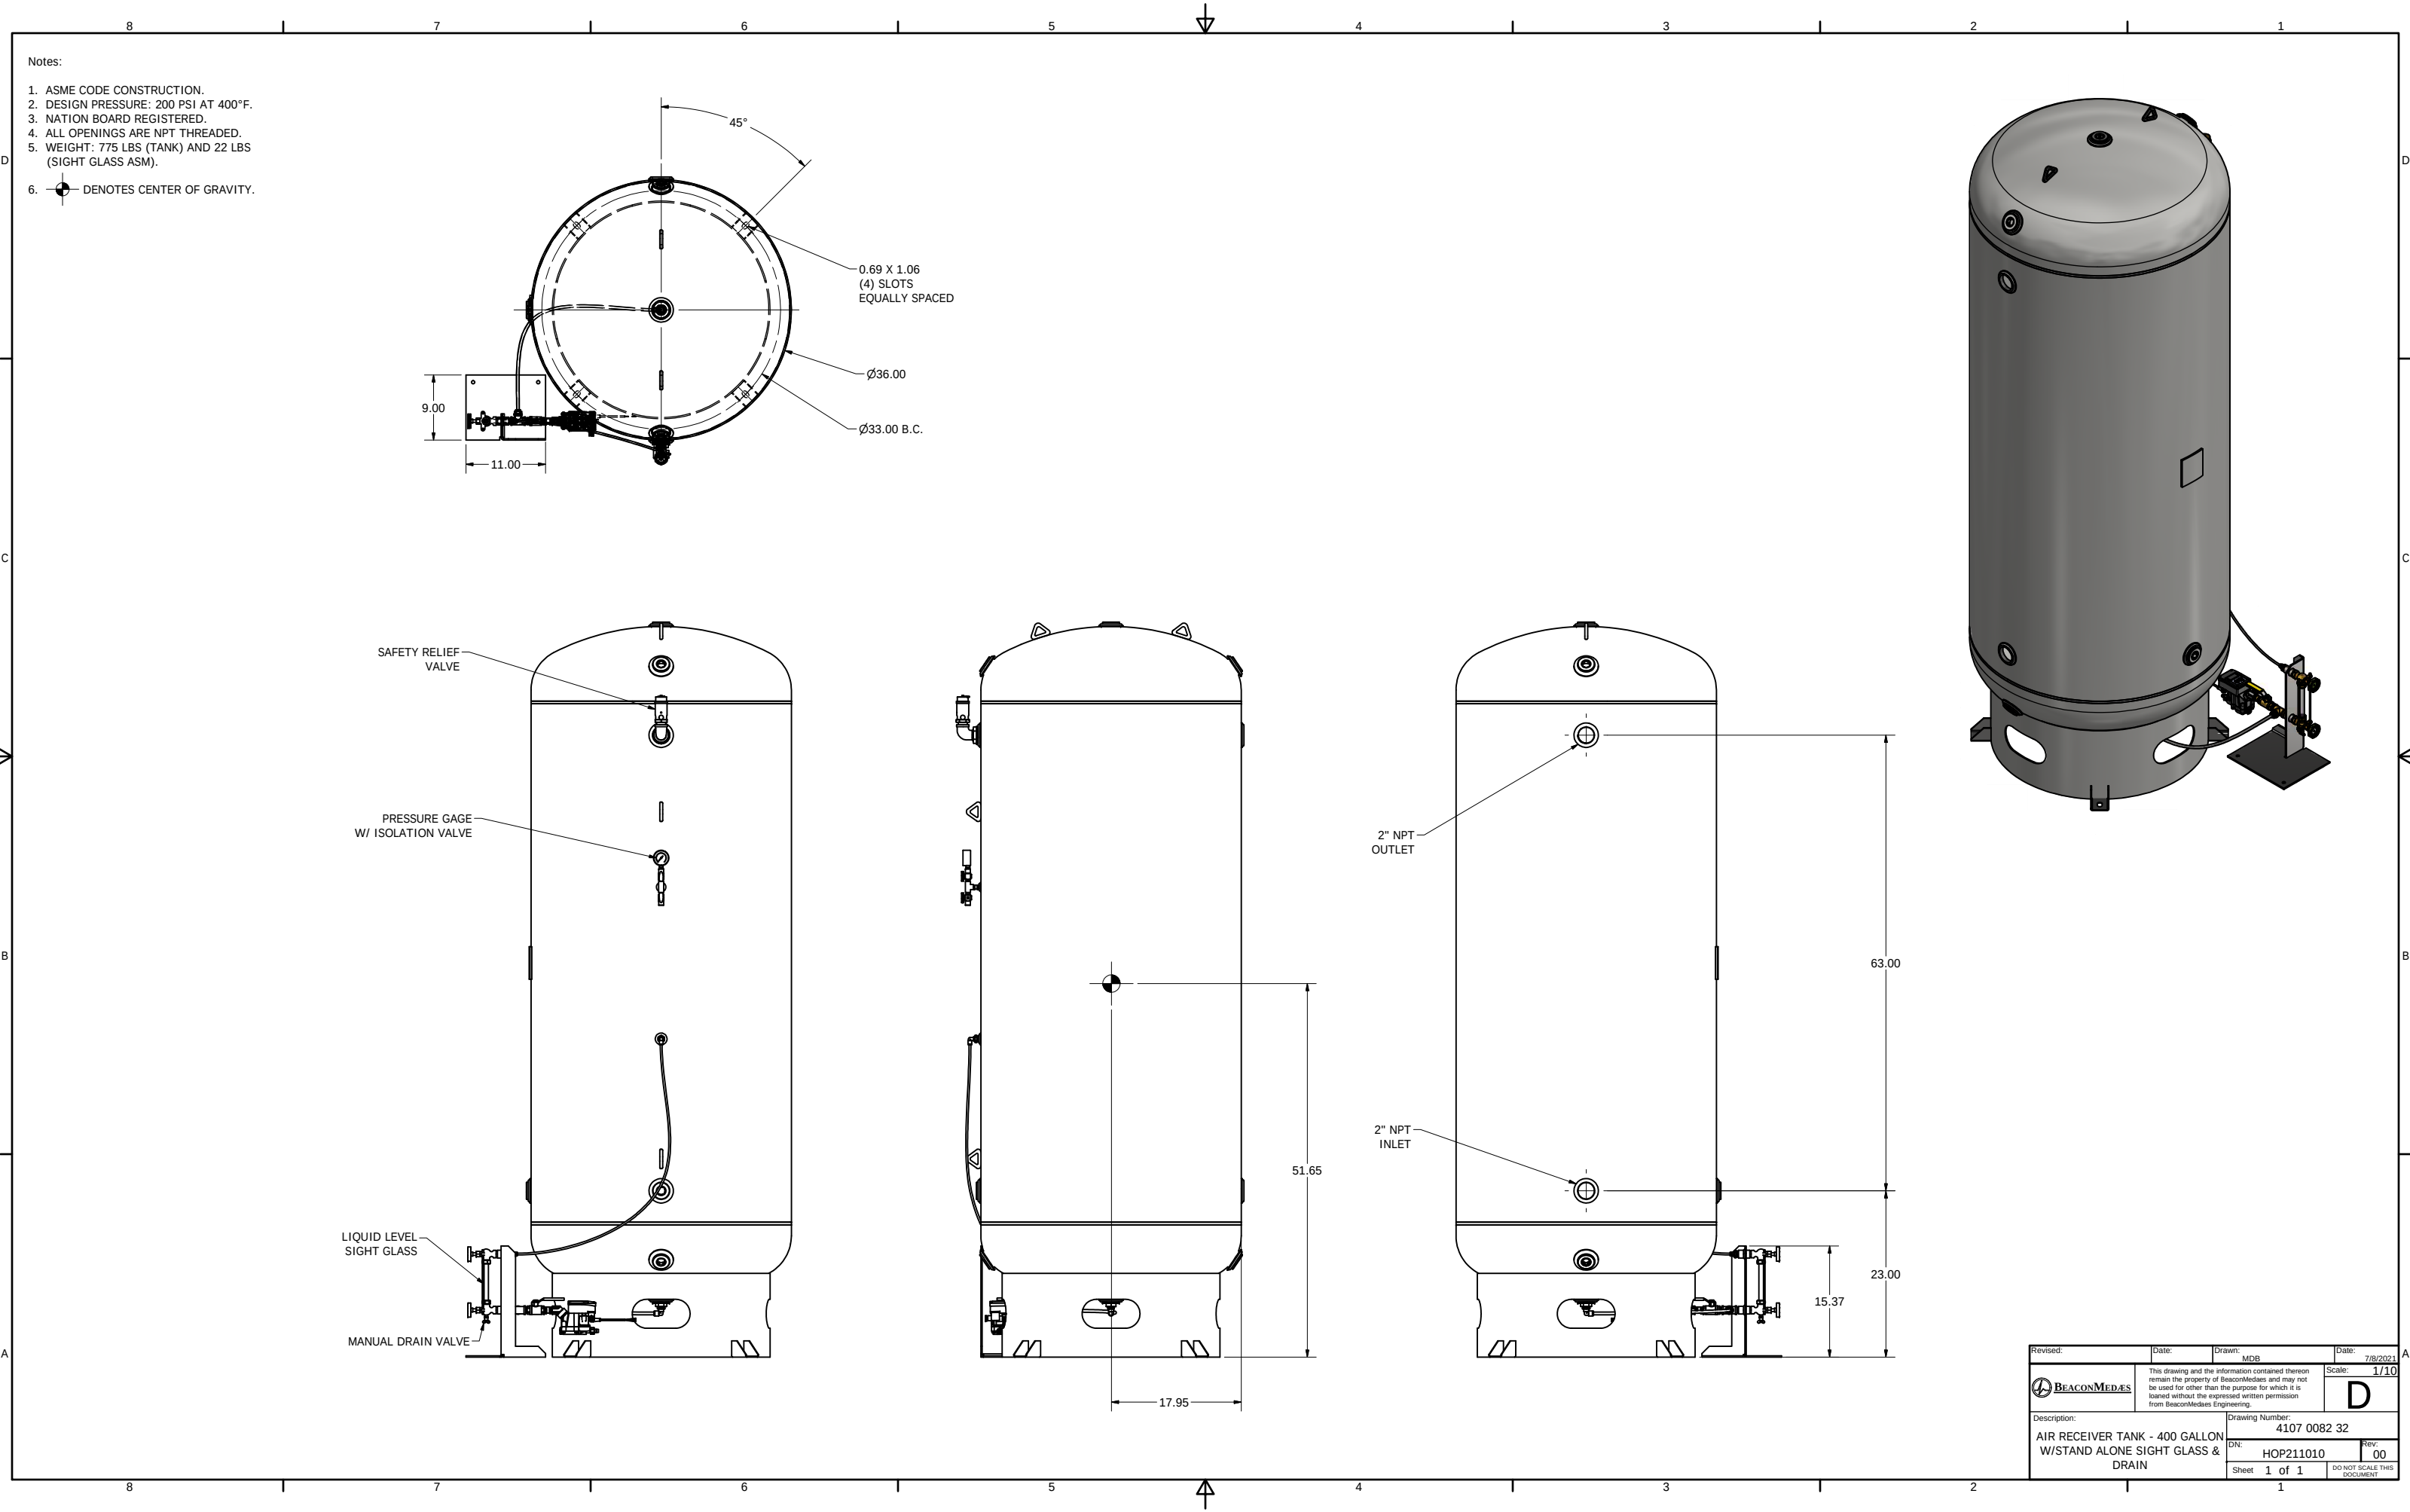

Revised:	Date:	Drawn: MDB	Date: 7/8/2021
	This drawing and the information contained herein remain the property of BeaconMedaes and may not be used for other than the purpose for which it is loaned without the expressed written permission from BeaconMedaes Engineering.		Scale: 1/10
Description: AIR RECEIVER TANK - 400 GALLON W/STAND ALONE SIGHT GLASS & DRAIN		Drawing Number: 4107 0082 32	
DN: HOP211010		Rev: 00	Sheet 1 of 1
		DO NOT SCALE THIS DOCUMENT	